




CANYON RIDGE

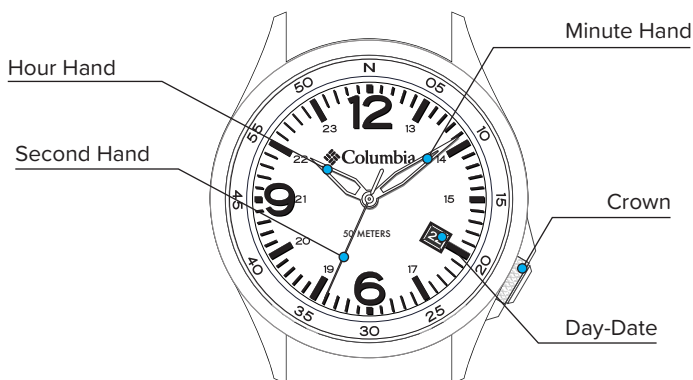

Epson VX42 - 3 Hand Date Quartz Movement

HOW TO SET THE TIME



- 1) Pull out the crown to the P2 click position.
- 2) Turn the crown to set hour and minute hands.
(Check that AM / PM is set correctly.)
- 3) Push the crown back into the normal position.

HOW TO SET THE DATE

- 1) Pull out the crown to the P1 click position.
- 2) Turn the crown clockwise for date setting.
- 3) Push the crown back into the normal position.



CANYON RIDGE

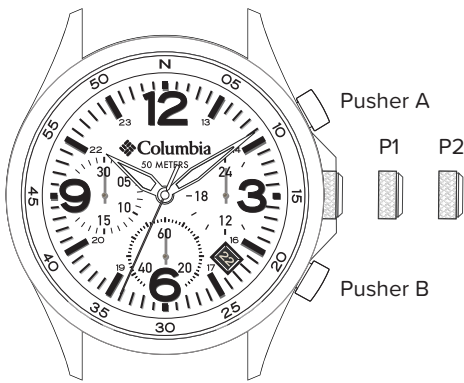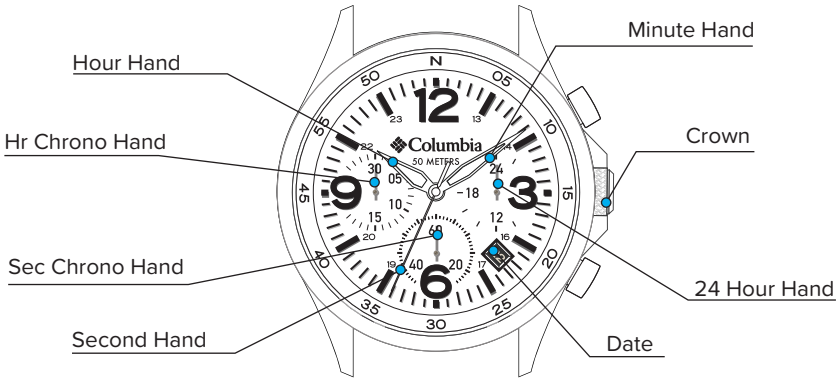

Epson VR32A - Chronograph-Date Quartz Movement

HOW TO SET THE TIME

 
- 1) Pull out the crown to the second click position.
- 2) Turn the crown to set hour and minute hands.
(Check that AM / PM is set correctly.)
- 3) Push the crown back into the normal position.

HOW TO SET THE DATE


- 1) Pull out the crown to the first click position.
- 2) Turn the crown to left for date setting.
- 3) Turn the crown to right for day setting.
*Do not set the date between 9:00 P.M. and 1:00 A.M.
as this will cause a malfunction.
- 4) Push the crown back into the normal position.

HOW TO USE THE CHRONOGRAPH


- 1) Standard Measurement



 - 2) Accumulated Elapsed Time Measurement



 - 3) Split Time Measurement



- 4) Measurement of Two Competitors

