


OUTBACKER

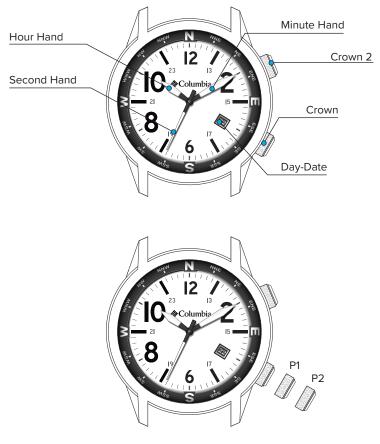

Epson VX42 - 3 Hand Date Quartz Movement

HOW TO SET THE TIME

1) Pull out the crown to the P2 click position.

2) Turn the crown to set hour and minute hands. (Check that AM / PM is set correctly.)

3) Push the crown back into the normal position.

HOW TO SET THE DATE

1) Pull out the crown to the P1 click position.

- 2) Turn the crown clockwise for date setting.
- 3) Push the crown back into the normal position.

HOW TO USE THE COMPASS RING

1) Ensure the watch is set to the correct time and normal time, not DST (Daylight Savings Time).

2) Holding the watch level, point the hour hand towards the sun.

3) Rotate the bezel until the S is halfway between the sun marking and the 12 o'clock hour position.